

# <u>T1737 – Comet MXR225/01 Single Focal Spot</u>

# X-Ray Tube





# **Includes:**

Comet MXR225/01 X-Ray Tube Single Focal Spot (0.5mm) 225kV/1.4mA Manufactured 2005





# **Product Description**

The MXR-225/01 is an unipolar water-cooled tube assembly with integrated radiation protection. It comprises a single focal spot, a tungsten anode and a directional beam. The tube is specifically designed for non-destructive imaging applications.

# **Product Specifications**

Nominal tube voltage	225 kV
Continuous rating	320 W
Focal spot acc. EN 12543	
Focal spot acc. ASTM E1165-12	N/A
Filament current, max	
Filament voltage, typical	
nherent filtration	0.8 ± 0.1 mm Be
Target material	W
Target angle	10°
Radiation coverage	40° x 30°
Leakage radiation, max. at loading factors in 1m distance	10 mSv/h (225 kV; 1.4 mA)
Weight	
Terminal type	
Gapping spring-loaded HV-cable	2 rings visible (~7 mm)
Gapping non-spring-loaded HV-cable	5.5 - 6 mm
Grease quantity for HV-cable terminal	1.2 ml




Part No. 915327.51 Version 4, 09/2013






## **Power rating charts**

Power rating at given filament current

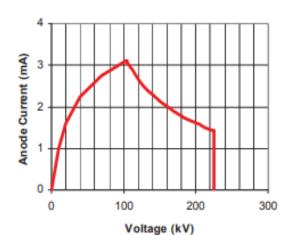

Connection of filament (C = Common)

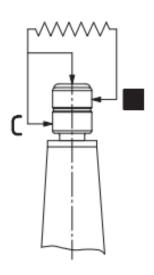

# Cooling


Cooling medium	Water
Cooling medium flow, min.	4 l/min
Cooling medium temperature at inlet, max	35°C
Pressure at cooling medium inlet, max	6 bar
Post-cooling time after switchoff, min.	2 min



Part No. 915327.51 Version 4, 09/2013



### **Outline drawing**

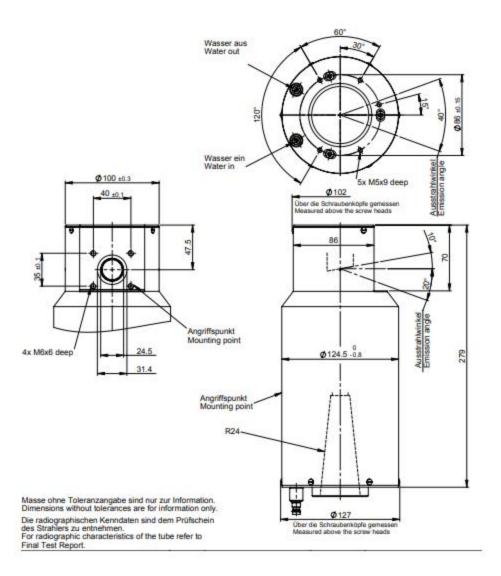



COMET AG, Herrengasse 10, CH-3175 Flamatt T +41 31 744 90 00, www.comet-xray.com Part No. 915327.51 Version 4, 09/2013

Page 3



#### General information

#### General

The control of the high voltage and the filament current as well as the design of the cooling system and the radiation protection are within the responsibility of the original equipment manufacturer (OEM). For detailed instructions refer to our "X-Ray Tube Manual". Provisions in the generator must assure that the X-Ray tube will be protected against overcurrent, overvoltage and lack of cooling. Otherwise the tube and/or the radiation protection may be damaged and become a hazard.

#### Connection of the X-ray tube

High-voltage cables must be installed by trained personnel only. Please proceed with the installation as follows: Cleaning, gapping & greasing (see values page 1), assembly and maintaining. Detailed instructions can be found in our "X-RayTube Manual"

#### Cooling

The customer is in charge that the cooling circuit is properly connected to the cooling system. Prior to operating the tube, the coolant must be turned on. Make sure that the coolant flow meets the required cooling conditions. When the tube is switched off, the coolant flow must continue for at least 2 minutes in order to protect the anode and the lead protection from overheating.

#### Radiation protection

When installing an X-ray tube assembly into a X-ray equipment and/or operating an X-ray equipment, the responsibility for radiation protection is with the user. Compliance with local regulatory requirements and limit values must be assured. After each tube exchange, repair, modification or upgrade of the unit a radiation protection integrity should be performed. Do not modify the tube assembly itself!

#### Return of Goods to COMET

Prior to shipment to COMET a Field Failure Report (FFR) will be required. The completed FFR has to be be added to the shipping documents. The FFR can be downloaded from: www.comet-xray.com/Service



Part No. 915327.51 Version 4, 09/2013

Page 4